



MP3 PLAYER

CY65P10



CYGEAR MP3 PLAYER WITH YOUR CYBIKO COMPUTER

The Cybiko MP3 Player is fully compatible with the Cybiko Wireless Inter-tainment Computer. It allows you to play MP3 files, and use the memory card to extend Cybiko computer memory. In addition, you can download and upload all kinds of files from a PC to the MP3 cartridge and from the cartridge to a PC via a USB.

Files are stored on a removable SmartMedia™ Card (SMC) that is inserted into the slot of the MP3 cartridge.

The MP3 Player supports any 3.3V manufacturer's cards, in sizes of 4, 8, 16, 32, and 64 MB.

You can listen to music and continue playing any game or using an application at the same time! Don't worry about losing the files – they're stored on the SMC or on Cybiko computer!

WHAT IS A SMARTMEDIA™ CARD?

SmartMedia™ cards serve as additional memory to the flash memory on Cybiko computer itself. You can buy several cards, download different games and files on them, and simply change cards in the cartridge.

HOW TO INSERT THE SMC INTO THE CARTRIDGE

To insert SMC (SmartMedia™ Card) into the cartridge, check the orientation of the SMC and insert it into the slot of the cartridge.

HOW TO INSERT CARTRIDGE INTO YOUR CYBIKO COMPUTER

To use the cartridge, turn your Cybiko computer off. Remove the plastic cover on the bottom of your Cybiko computer. Slide the cartridge into the slot. Turn your Cybiko computer on again.

ATTENTION: Do not attempt to plug in or plug out the cartridge when your Cybiko computer is ON!

HOW TO GET STARTED

Before you first start working with the cartridge, you need to upgrade the system on your Cybiko computer to **System Pack v.56** or later, as well as download the **MP3 application** from www.cybiko.com/mp3/ on your Cybiko computer using CyberLoad on your PC.

If you wish to download files from your PC, you need to install **Cybiko MP3 USB Drivers** to your PC. For this perform the following:

2 MP3 Player

1. Get the USB Install Pack from www.cybiko.com/mp3/
2. Install drivers on your PC: go into Windows Explorer and double click USBDriverSetup.exe file.

ATTENTION: You need to have an available USB port and Windows'98/2000 running on your PC for the cartridge support software to work correctly.

Visit our web site, www.cybiko.com, for answers to all your most pressing questions. However, if you don't have Internet access, drop us a line at our corporate address. We'll be glad to help you out, and, if necessary, hook you up with a disk.

HOW TO DOWNLOAD TO SMC

If you download from www.cybiko.com:

1. Get the latest version of CyberLoad from www.cybiko.com
2. Install CyberLoad by following the instructions on the web page.
3. Download games or applications as you normally would for files already stored on your Cybiko computer (see CyberLoad help).

If you download from PC:

1. Connect the MP3 cartridge to your PC via the USB. For this, plug the USB into the USB port of your PC as well as the USB port of the cartridge.

ATTENTION: The MP3 cartridge must be plugged into your Cybiko computer and the Cybiko computer should have High battery level or be connected to your power supply cable.

2. Run Windows Explorer or any other program that allows you to copy files. MP3 Player will be recognized as a removable disk. Choose files on the PC that you want to download to the cartridge and copy them onto the removable disk. After you've done this:
 - MP3 files are played in the MP3 application;
 - Cybiko computer's applications and games can be accessed via Uploader & File Manager in the Applications Desktop;
3. When finished unplug the USB cable from the USB port of your MP3 cartridge.

You can access files that are on your MP3 Player in one of the following ways:

- Using the Uploader & File Manager

3 MP3 Player

1. Turn on your Cybiko computer.
2. After your system loads, you will find yourself on the Main Desktop.
3. Choose the Applications icon and press <Enter>.
4. When the Applications Desktop appears, choose the Uploader & File Manager icon and press <Enter>. You'll see the list of files on your Cybiko computer, and the "SMC..." item. On the right part of the "SMC..." item, you'll see the information about free/total space on the SMC.
5. Highlight the "SMC..." item using <Up arrow>/<Down arrow> and press <Enter>. This will show you all the files on your SMC.
6. You can use them the same way you use standard Cybiko computer's files: upload them to your CyFriends, delete, rename, open or run. To do any of these actions, just choose a file and press <Enter> or <Fn><Enter>, upon which time, the Actions menu will appear. Then, choose an action you want to perform by <Up/Down arrows> and press <Enter>.
7. You can move or copy the files from SMC to Cybiko computer and from Cybiko computer to SMC. To move or copy a file, choose the file and press <Enter> or <Fn><Enter>, upon which time, the Actions menu will appear. Choose the action "Move to..." or "Copy To..." by <Up/Down arrows> and hit <Enter>, then select the destination in sub-menu and press <Enter>.

Note: Games and applications that are stored on SMC are not shown on Cybiko computer's Desktop. If you want to run them, follow the actions described above.

ATTENTION: Visit our web site, www.cybiko.com/mp3/, to see the list of applications which may conflict with MP3 application when MP3 cartridge is inserted into the Cybiko computer. Before running these applications simply turn off your Cybiko computer, remove the cartridge and turn on your Cybiko computer again.

- Using the **SMC** icon

1. Turn on your Cybiko computer.
2. After your system loads, you will find yourself on the Main Desktop.
3. Choose the icon SMC and press <Enter>. You'll see the list of files stored on the SMC and the "Device Flash" item.
4. See points 6-7 of the "Using the Uploader & File Manager" item.

- Using an appropriate application

If your SMC contains user files, you can open them directly from the application where you made them.

4 MP3 Player

1. Start the application. You will see files created by the application on your Cybiko computer and the "SMC..." item.
2. Press <Enter> on the "SMC..." item to show files that belong to the application.
3. Use them just like you would if they were on your actual Cybiko computer. Also, when you want to create a new file on SMC, you'll be able to do that using the "New..." item.

Note: To return to the list of files on the Cybiko computer, choose the "Device Flash" item and press <Enter>. <Esc> works here in its usual way- exits an application or closes a list.

HOW TO UPLOAD FROM SMC TO PC

1. Connect the cartridge to PC via USB. For this, plug USB into the USB port of your PC as well as the USB port of the cartridge.
2. Run Windows Explorer or any other program that allows you to copy files. MP3 Player will be recognized as a removable disk.
3. Open the removable disk and choose the file you want to upload to your PC.
4. Upload them to the desired place on your PC.

HOW TO REMOVE CARTRIDGE

Turn your Cybiko computer off. Remove the cartridge. Replace with another Cybiko cartridge or plastic cover supplied with Cybiko computer. (Cover protects your connector from dirt, water, and damage.) Turn Cybiko computer on.

HOW TO PLAY

1. Turn your Cybiko computer on.
2. To start playing MP3 Player, press the **Play/Pause** button.
3. To pause playing, press the **Play/Pause** button.
4. To stop playing, press the **Stop** button.
5. To change the volume level, use the "+/-" buttons.
6. To rewind or fast forward the song, press the ⏮ button or the ⏭ button and hold it until you reach the desired place in the song.
7. To skip to next/previous song, press the ⏮ button or the ⏭ button once. Each time you press it, you will move one song forward/back.

Note: If your Cybiko computer has a full charge, it is capable of playing MP3 files for approximately 2.5-3 hours. It depends on the loudness of the MP3 files, the quality of the

headphones, and whether you play games or use apps on your Cybiko computer at the same time you are listening to MP3 files.

Besides working from the cartridge keyboard, you can also perform these actions using settings in the MP3 application on your Cybiko computer. You may choose either of these two options of how to work with the cartridge, depending on which way is more convenient for you. Pay attention, for some options, such as balance, equalizer, repeat and random modes, Playlist organization and others, are accessible only from the MP3 application.

You can learn more about how to operate the MP3 Player from [The Complete MP3 Player Online Instruction Guide](http://www.cybiko.com/mp3/) at our site www.cybiko.com/mp3/.

PRECAUTIONS

- Never remove the SMC from your MP3 player cartridge when you use an application or play a game that is stored on the SMC. (We recommend turning your Cybiko computer off before you try to insert or remove the SMC.)
- Never remove or insert the cartridge when Cybiko computer is ON. (We recommend turning your device off prior to insertion and removal of the cartridge.)
- Never compress the SMC.
- Never force the cartridge into any other device or adapter but Cybiko computer.
- Avoid extreme heat, cold or humidity.
- Keep the cartridge away from direct sunlight, electrostatic sources and magnetic fields.
- This cartridge is not waterproof. Do not expose it to rain or moisture.
- Do not bend, drop, impact, or attempt to open the cartridge.

WARRANTY

Cybiko provides a limited 1-year guarantee to the original purchaser that this product manufactured by Cybiko shall be free from defect in workmanship. Cybiko's sole obligation in such event shall be Cybiko's option to either 1) repair, 2) replace, or 3) credit the value of the product (based on the lower of the actual purchase price or market value on the defective product return.)

Cybiko shall not be obligated to repair or replace defective products, in whole or in part, for causes external to the goods such as catastrophe, power failure, or improper use or handling. In no event shall Cybiko be liable to any person for any incidental or consequential damages of any kind or nature, which may be attributable to Cybiko products.

Copyright © 1999-2001 Cybiko, Inc. Printed in Taiwan R.O.C.